

Technical Data Sheet

Tile Removing Chisel

USAGE INFORMATION

For use in tile, plaster, render removal applications.

Prior to using chisels, please ensure your machine has the 'chisel only' function as they are designed to be used on this function only.

Before using this product the chuck shank should be thoroughly lubricated.

Minimal force should be applied when being used.

After using the product continuously for 10-15 minutes the chisel must be removed from the chuck and allowed to cool at room temperature.

