

## Technical Data Sheet




### BRICK LINE RUNNER™

#### 1ST CLAMP

##### 1. TIE ...


Tie a small knot in the end of the line and fix line into peg slot. Wrap the line 4 or 5 times around the line peg.

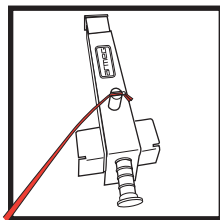

#### 2ND CLAMP


##### 4. TIGHTEN ...

Pull the line tight to take out slack and place the 2nd clamp over the line and brick.

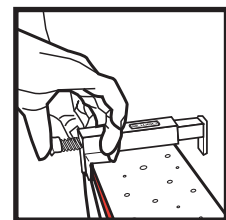


##### 2. SLOT ...

Place the line through the side slot opposite to the direction you intend to lay. Pull the line through and hold level with the brickwork. Depress the spring plunger and clamp to the brick / block.

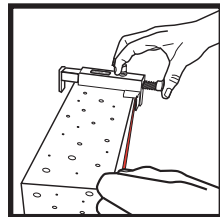


##### 5. PULL ...

Pull the line up through the slot and wrap the line around the peg.

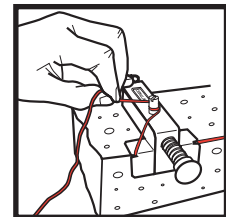


##### 3. CORRECT FIXTURE ...

This shows the correct fixture of the 1st clamp.

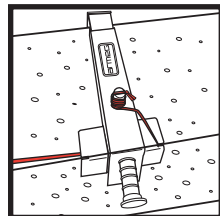



##### 6. FIX ...

Place the line through the peg slot to ensure the line is fixed. If at this point the line has some slack, move each clamp outwards a little to tension.

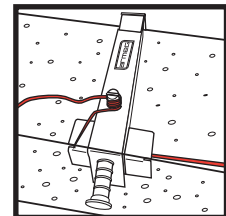

##### 7. LAY ...

The clamps are ready for a course to be laid.

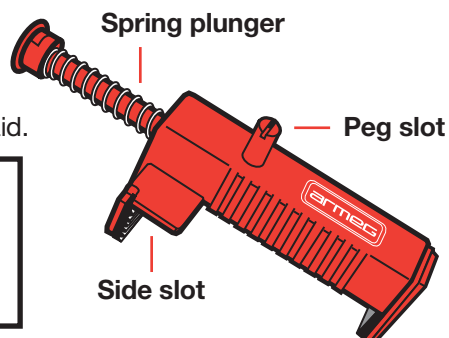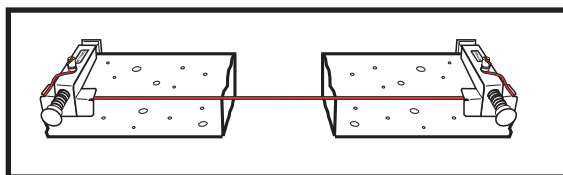

#### TECH TIP!

Try using multiple clamps for working around corners and on multiple walls.